
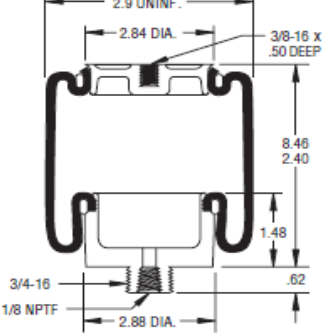

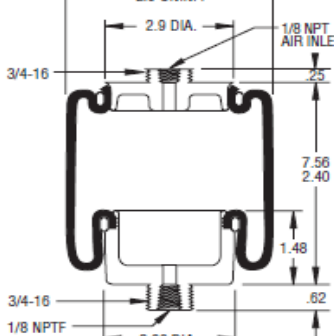
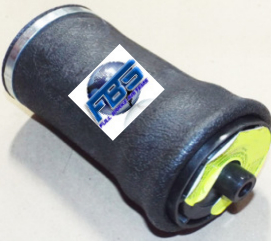
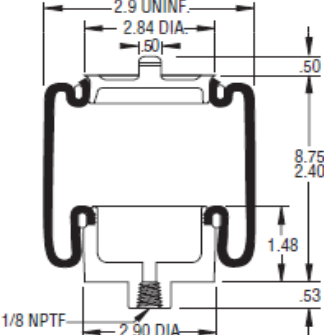

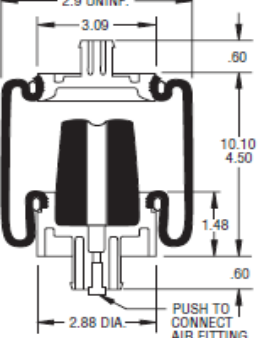

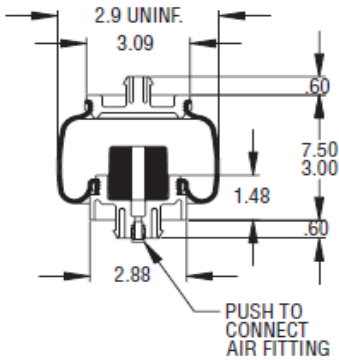

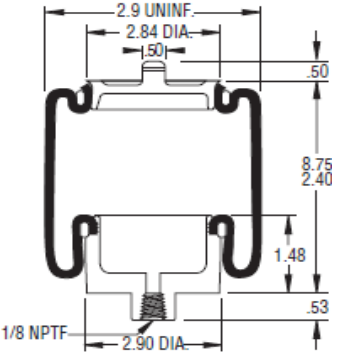

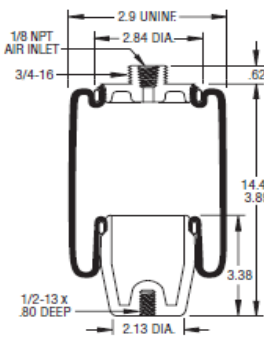

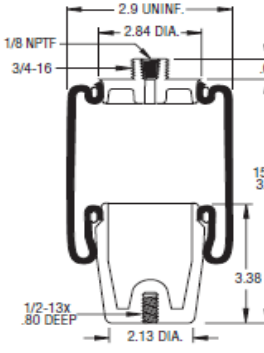

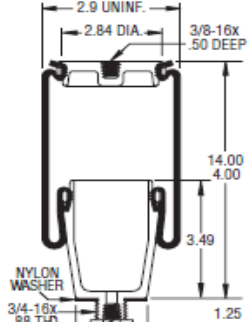

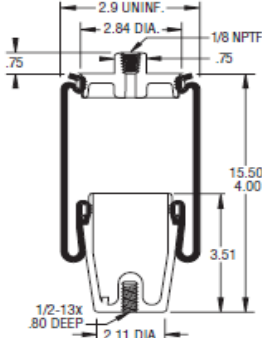

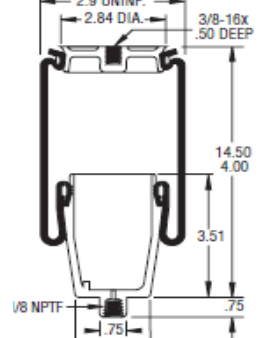

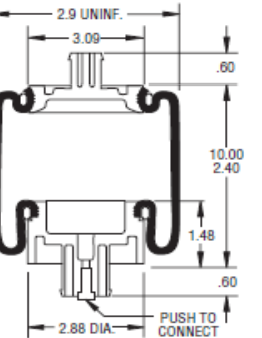

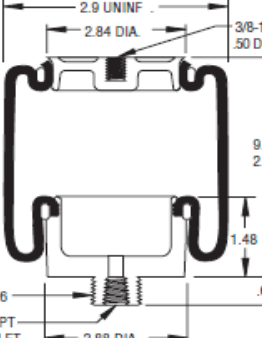


DESCRIPCION	CODIGO	FOTO	COMENTARIO
PULMON CABINA FORD, KENWORTH, INTER, VOLVO, FREIGHTLINER 1102-0020/0023	WA02-7001C RF105409		
PULMON CABINA MACK 227QS24	WA02-7007C RF105410		
PULMON CABINA FREIGHTLINER 1S5- 040	WA02-7087		
PULMON CABINA FREIGHTLINER 66003-3406	WA02-7205 RF105411		

<p>PULMON CABINA FREIGHTLINER SENTURY, ARGOSY 18-29919-000</p>	<p>WA02-7206</p>		
<p>PULMON CABINA FREIGHTLINER FLD 1S5-040</p>	<p>WA2-7087C RF105404</p>		
<p>PULMON CABINA 1102-0040</p>	<p>WA02-7012C</p>		
<p>PULMON CABINA MACK 227QS38</p>	<p>WA02-7017</p>		
<p>PULMON CABINA PETERBILT 29- 03200</p>	<p>WA02-7036C</p>		

<p>PULMON CABINA NAVISTAR 1102- 0076/1101-0043</p>	<p>WA02-7081C</p>		
<p>PULMON CABINA KENWORTH 1102- 0082</p>	<p>WA02-7110C</p>		
<p>PULMON CABINA KENWORTH 1102- 0077</p>	<p>WA02-7109 WA1104K002</p>		
<p>PULMON CABINA KENWORTH 1102- 0074</p>	<p>WA02-7064</p>		
<p>FREIGHTLINER 18- 40977-000 CENTURY CLASS Y ARGOSY</p>	<p>WA02-7207</p>	