
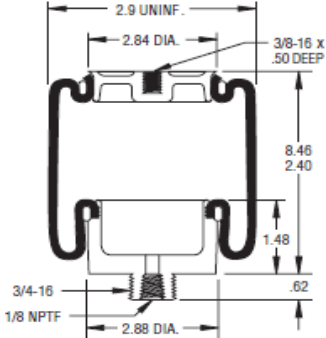

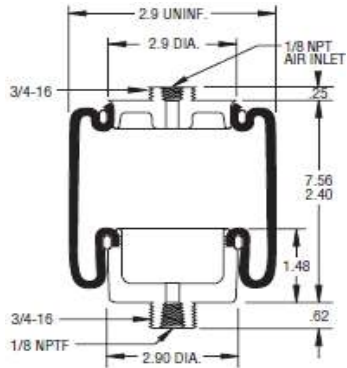

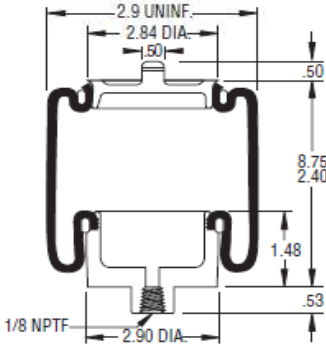

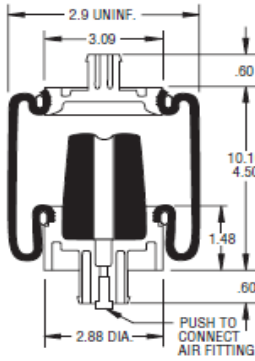

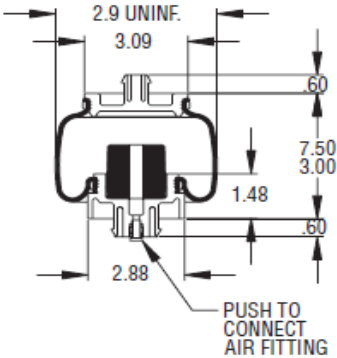

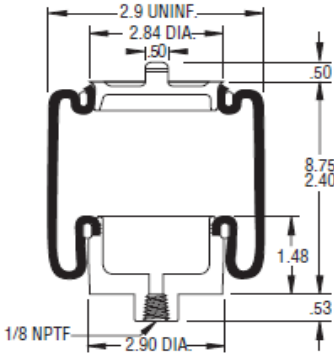

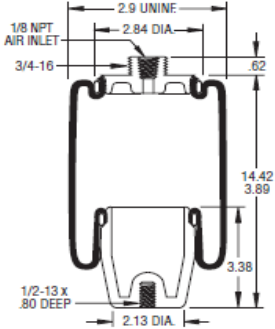

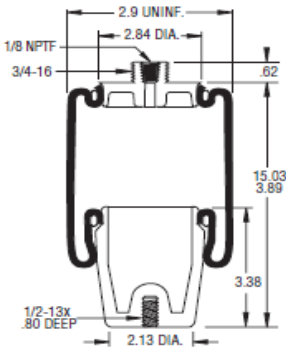

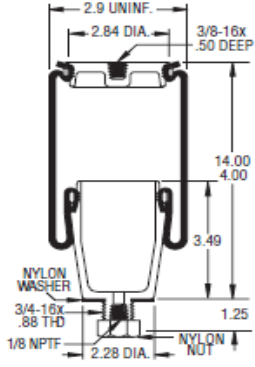

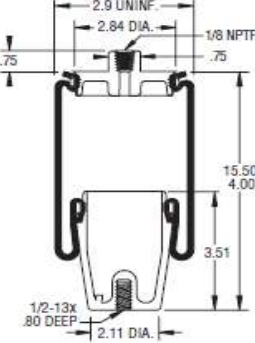

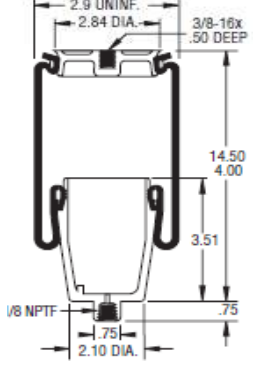

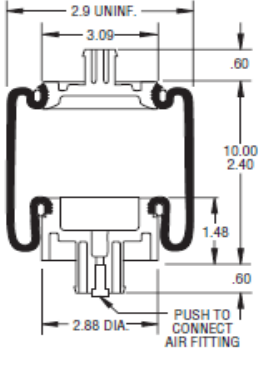

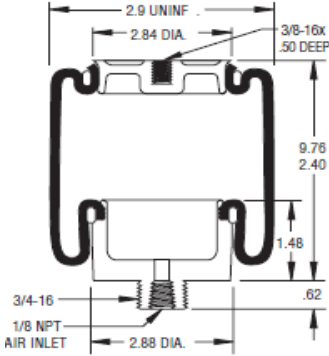

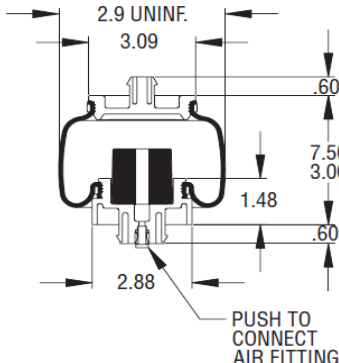

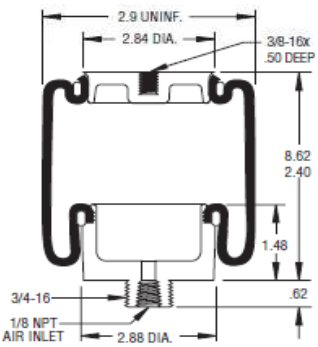


DESCRIPCION	CODIGO	FOTO	COMENTARIO
PULMON CABINA FORD, KENWORTH, INTER, VOLVO, FREIGHTLINER 1102-0020/0023	101863		
PULMON CABINA MACK 227QS24	101867		
PULMON CABINA FREIGHTLINER 1S5- 040	101865		
PULMON CABINA FREIGHTLINER 66003-3406	101860 / 101864		

DESCRIPCION	CODIGO	FOTO	COMENTARIO
PULMON CABINA FREIGHTLINER SENTURY, ARGOSY 18-29919-000	101858 / 101866		
PULMON CABINA FREIGHTLINER FLD 1S5-040	101865		
PULMON CABINA 1102-0040	101862		
PULMON CABINA MACK 227QS38	101870		

DESCRIPCION	CODIGO	FOTO	COMENTARIO
PULMON CABINA PETERBILT 29- 03200	101868		
PULMON CABINA NAVISTAR 1102- 0076/1101-0043	101859		
PULMON CABINA KENWORTH 1102- 0082	101869		
PULMON CABINA KENWORTH 1102- 0077 WA1104k002	101861		

DESCRIPCION	CODIGO	FOTO	COMENTARIO
PULMON CABINA KENWORTH 1102- 0074	103402		
FREIGHTLINER 18- 40977-000 CENTURY CLASS Y ARGOSY	103404		
PULMON CABINA MACK 227QS33 1S4-007	103401		
PULMON CABINA PETERBILT 7164	103403	